 



Correct Steps to Change LPG Cylinders with Prest-O-Lite (POL) Valves

For the sake of safety, changing LPG cylinder should be carried out by personnel with relevant training, according to the procedures below.

1 Before changing the LPG cylinder

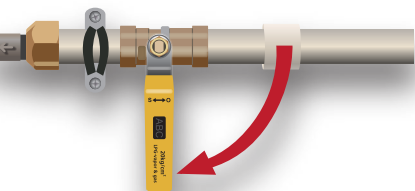

 1. Turn off all related gas appliances and valves.

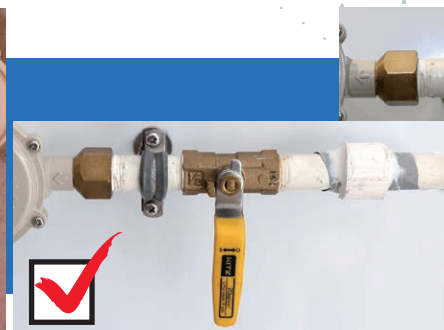


2. Ensure good ventilation and no naked flames in the vicinity.



3. No hand tools should be used throughout the changing process.

2 Disconnect the used LPG cylinder

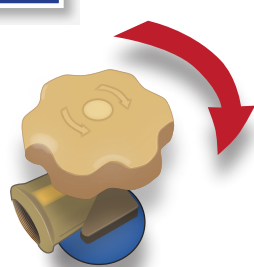

1. Close the cylinder valve completely by turning it clockwise.




2. Hold the regulator firmly with one hand and turn its handwheel clockwise with another hand to disconnect the regulator.



3. Check the regulator and its rubber ring, and ensure there is no crack or damage.

3 Connect the new LPG cylinder

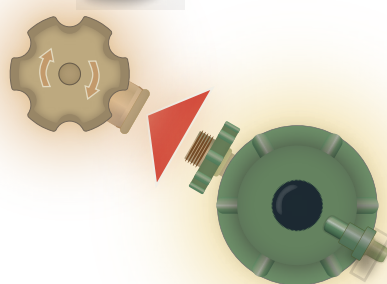

1. Remove the seal plug of the LPG cylinder.



2. Check the cylinder valve and its inner thread, and ensure there is no obvious damage.




3. Hold the regulator firmly with one hand and turn its handwheel anticlockwise with another hand until tight interlock with the cylinder valve is secured.

4 Check after changing the LPG cylinder



1. Pull and turn the regulator lightly to check that the regulator and the cylinder valve are closely connected.
2. Open the cylinder valve by turning it anticlockwise. Check for smell or hissing sound from the joint.

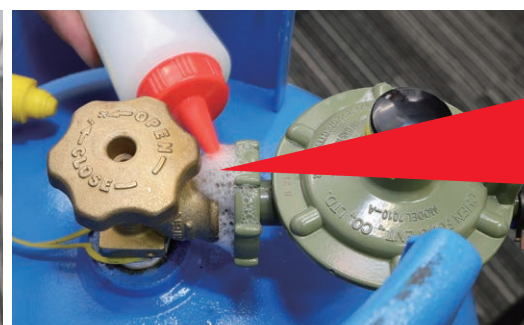

3. Apply soapy water at the joint and confirm that no bubbles appear.
4. If everything is in order, operation of the gas appliances can be resumed.



If abnormality is found, close the cylinder valve and arrange for a Registered Gas Contractor to follow up at once.
In case of persistent gas leakage, evacuate to a safe location and call **999** immediately.



◀ The correct steps to replace the LPG cylinder with Prest-O-Lite (POL) Valve

Enquiry: 1823

Website: <http://www.emsd.gov.hk>

機電工程署
EMSD

